

OPERATING INSTRUCTIONS

RH103



**VERY HIGH POWER RANDOM DIGITAL REPELLER WITH
ANIMAL SPECIES SELECTOR.**

OPERATION AND PARTS OF THE REPELLER.

Box Contents:



Repeller.



Lock.



Tweezers.



****Very important: The night function is cancelled, since the operating time is controlled with the clock.****

This repeller works at 12 volts with a battery or with a 220 a12v transformer (Model A1102). It can also work with a solar panel, which in this case would work with the battery, since this would act as a regulator and accumulator.

Up to 4 speakers (AB203) can be added to this equipment with their respective sound cable (30, 50 or 100 metros), thus expanding its radius of effectiveness.

Speaker placement examples:



Example of placement with solar panel:



To place the device with a solar panel, you must plug the panel clamps (the red one to positive and the black one to negative) into the battery and from the battery remove the cable that will go to the repeller.

It is very important that the solar panel clamps do not touch each other, as this can cause a short circuit in the panel, breaking it and leaving it out of warranty.

ANIMAL TYPE SELECTOR



Animal species selection panel.

Animal correspondence label on selection panel.

CLOCK OPERATION:

Clockwise rotation
indication arrow.

CLOCK SWITCH:

Position "I" – The appliance operates continuously without the clock affecting its operation.

Position "Clock" – The appliance operates as programmed on the clock.

Position "0" – The appliance does not work. It is disconnected.



TIME ARROW:

Put the time on the arrow. For example, if it is 7 pm, we will move the clock until we see 19 in the triangle.

CLOCK OPERATING TABS:

If the tabs are facing outwards the repeller will work. If the tabs are facing inwards the repeller will not work.

Start-up example.

It is 8:00 in the morning and we are going to put the device into operation and we want it to ring from 9:00 in the morning to 1:00 p.m. and from 3:00 p.m. to 7:00 p.m. We put the number 8 in the time setting triangle, which is equivalent to 8 o'clock, la mañana. Ahorawe take the tabs out from number nine to number 13 and from number 15 to 19.

****IF IT IS DISCONNECTED LA ALIMENTACIÓN EL RELOJIT DOES NOT ROTATE AND LA PRÓXIMA VEZ QUESTART IT WILL HAVE TO BE TURNED ON TIME.****

VERY IMPORTANT

THE EQUIPMENT YOU JUST PURCHASED IS A VERY POWERFUL SOUND REPELLER, SO IT IS RECOMMENDED NOT TO PLACE FULL POWER NEAR THE EAR, AS IT MAY BE HARMFUL.

DO NOT CONNECT THIS APPLIANCE UNDER ANY CONCEPT TO A POWER SOURCE HIGHER THAN 12 VOLT, AS YOU MAY BURN IT, MAY BE OUT OF WARRANTY.

THIS DEVICE IS PREPARED TO OPERATE WITHLA TAPA PUESTA A LA INTEMPERIE. NO OBSTANTEIN CASE OF VERY HEAVY RAIN, IT IS RECOMMENDED TO PUT IT UNDER COVER, AS WATER MAY ENTER.

TO FUMIGATE, IT IS RECOMMENDED TO REMOVE THE DEVICE, SINCE FUMIGATION LIQUIDS CAN DAMAGE LA CAJA Y ELTHE CIRCUIT.