

DIGITAL PLAYER INSTRUCTIONS MODEL


MR105



**HIGH QUALITY DIGITAL PLAYER.
AUTHORIZED FOR EDUCATIONAL USE ONLY**

**THIS COMPANY IS NOT RESPONSIBLE FOR UNAUTHORIZED OR IMPROPER
USE OF THIS PLAYER**

OPERATION AND PARTS OF THE PLAYER.

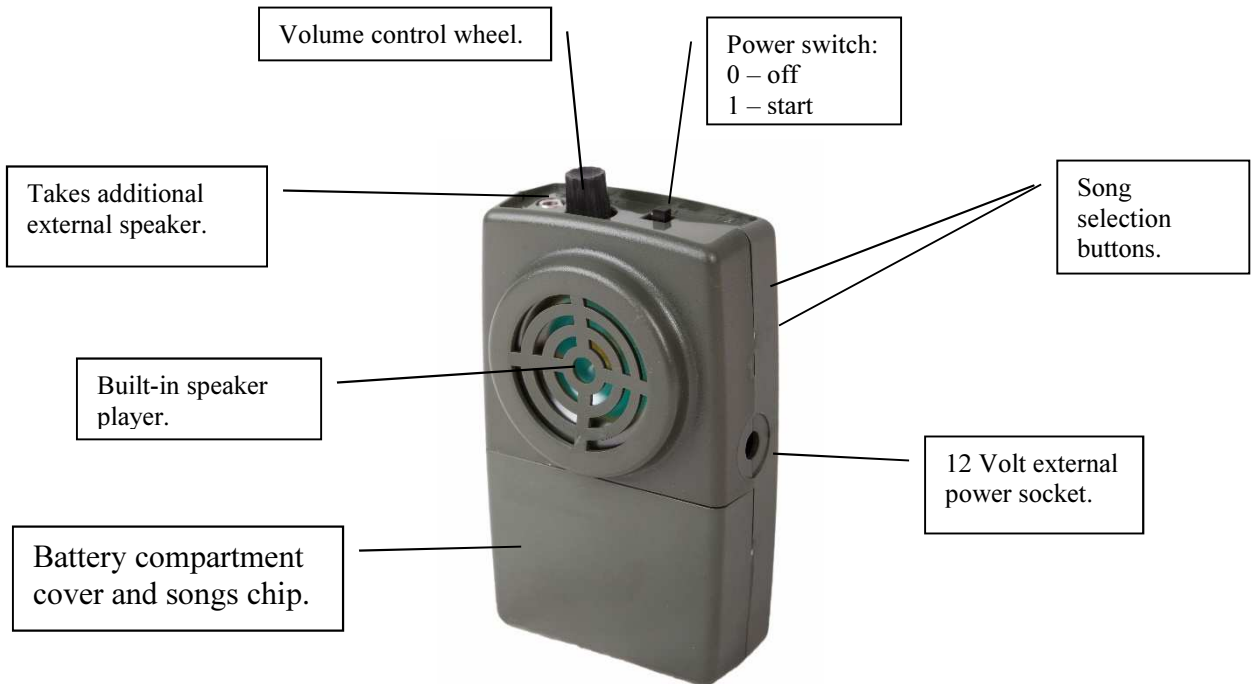

Edge selection buttons:

(+) Track Up: Pressing once goes up 1 track, holding down for 3 seconds goes up 10 tracks.

(-) Track down: Pressing once will go down 1 track, holding down for 3 seconds will go down 10 tracks.

** By pressing the 2 buttons at the same time – and + , we return to the beginning of the song list**



Right image: Rear view of the device where the display is to see the number of songs being played (it turns off after 15 seconds).

Left image: View of the inside of the device by removing the battery compartment cover where the memory and the 9-volt battery can be seen.

This digital audio player operates on 12 volts or with a 9 volt 6LR61 battery. **ALKALINE**.

The use of 9-volt batteries other than alkaline or rechargeable batteries is not recommended, as their life is very limited in these players.

Never connect this device to a power supply exceeding 12 volts, as this could cause irreparable damage, which is not covered by the player's warranty.

Since these are electronic devices, contact with water or very humid environments must be avoided, as this is very harmful to them and may cause damage and void the warranty.

If this player accidentally gets wet, you would have to remove the screws and take out the circuit and dry the water with a hair dryer. If after this operation it does not work, you would have to contact technical support.

Prolonged exposure to very high temperatures should also be avoided, as some parts could overheat and burn.

If you have any questions, before proceeding to send the device, please contact our company's technical service.

VERY IMPORTANT:

Since most of the repairs that come to our technical service are usually dead batteries, we recommend that before sending any device to be repaired, you check its operation with a new ALKALINE battery, preferably a recently purchased one, since sometimes if you have had them for a long time they may be expired.

The symptoms that usually occur when the battery is almost dead are that the sound becomes choppy, the song sings strangely or even changes to songs that do not correspond to the order of the song memory.

FOR ALL PLAYERS THAT ARE SENT FOR REPAIR AND HAVE USED BATTERIES, THE CUSTOMER WILL ASSUME THE TRANSPORT COSTS, EVEN IF THE PLAYER IS UNDER WARRANTY.